

# TRINITRON® COLOR TV

## OPERATING INSTRUCTIONS

Before operating the unit, please read this manual thoroughly and retain it for future reference.

KV-2725R

KV-2726R

KV-2728R

KV-2729R



OWNER’S RECORD

The model and serial numbers are located at the rear.  
Record these numbers in the spaces provided below. Refer  
to them whenever you call upon your Sony dealer regarding  
this product.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

CONTENTS

Warning..... 2

Precautions ..... 3

Features ..... 3

Location of controls ..... 4

Operation..... 6

    Viewing TV programs ..... 6

    Picture adjustments ..... 7

Presetting channels..... 8

    Adding channels ..... 9

    Erasing channels..... 9

Timer/Block .....10

    How to set the internal clock.....12

    How to set the program start Timer.....12

    How to set the channel Block.....13

Applications with other optional equipment.....14

    Enjoying VCR playback .....14

    Enjoying multichannel TV sound (MTS)  
        broadcast .....14


Antenna/cable connection .....15

Specifications .....back cover

Troubleshooting .....back cover


WARNING

To prevent fire or shock hazard, do not  
expose the unit to rain or moisture.

 


**CAUTION**


RISK OF ELECTRIC SHOCK  
DO NOT OPEN



CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK,  
DO NOT REMOVE COVER (OR BACK).  
NO USER-SERVICEABLE PARTS INSIDE.  
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

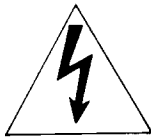

This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**CAUTION**  
TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

## PRECAUTIONS

### Safety

- Operate the unit only on 120 V AC.
- One blade of the plug is wider than the other for the purpose of safety and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- Should any liquid or solid object fall into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- Unplug the unit from the wall outlet if it is not going to be used for several days or more. To disconnect the cord, pull it out by the plug. Never pull the cord itself.

### Installation

- To prevent internal heat build-up, do not block the ventilation openings.
- Do not install the unit in a hot or humid place or in a place subject to excessive dust or mechanical vibration.

### Cleaning

Clean the unit with a slightly damp soft cloth. Use a mild household detergent. Never use strong solvents such as thinner or benzine as they might damage the finish of the cabinet.

### Repacking

Retain the original carton and packing materials for safe transport of this unit in the future.

---

Use of this television receiver for other than private viewing of programs broadcast on UHF or VHF or transmitted by cable companies for the use of the general public may require authorization from the broadcaster/cable company and/or program owner.

---

 
## FEATURES

- **New Microblack™ Trinitron picture tube** with more finely pitched aperture grille for higher resolution, higher contrast picture.
- **Multi-band VHF/UHF/CATV tuner** receives up to 125 cable channels for a total of 181 possible off-air and cable channels.
- **Timer/Block** features automatic program starting and channel blocking.
- **MPX OUT (multiplex output) jack** allows connection of the optional MLV-1100 adaptor for multi-channel TV sound (stereo or bilingual) broadcasts.
- **Jump button** makes it possible to switch quickly between two channels and monitor two different programs alternately.
- **Sleep timer** automatically turns off the TV after one hour.
- **Remote Commander** for convenient operation.
- **On-screen display**
- **Dynamic Color™ system** for superior color reproduction with natural facial color tones and dazzling whites.
- **Dynamic Picture™ system**, which adjusts picture contrast automatically to produce more detail in both bright and dark areas of every scene.
- **Colorpure Filter™**, which produces fine picture detail without color spill or color noise.


# LOCATION OF CONTROLS

For further details, refer to the page numbers next to each item.


## Front

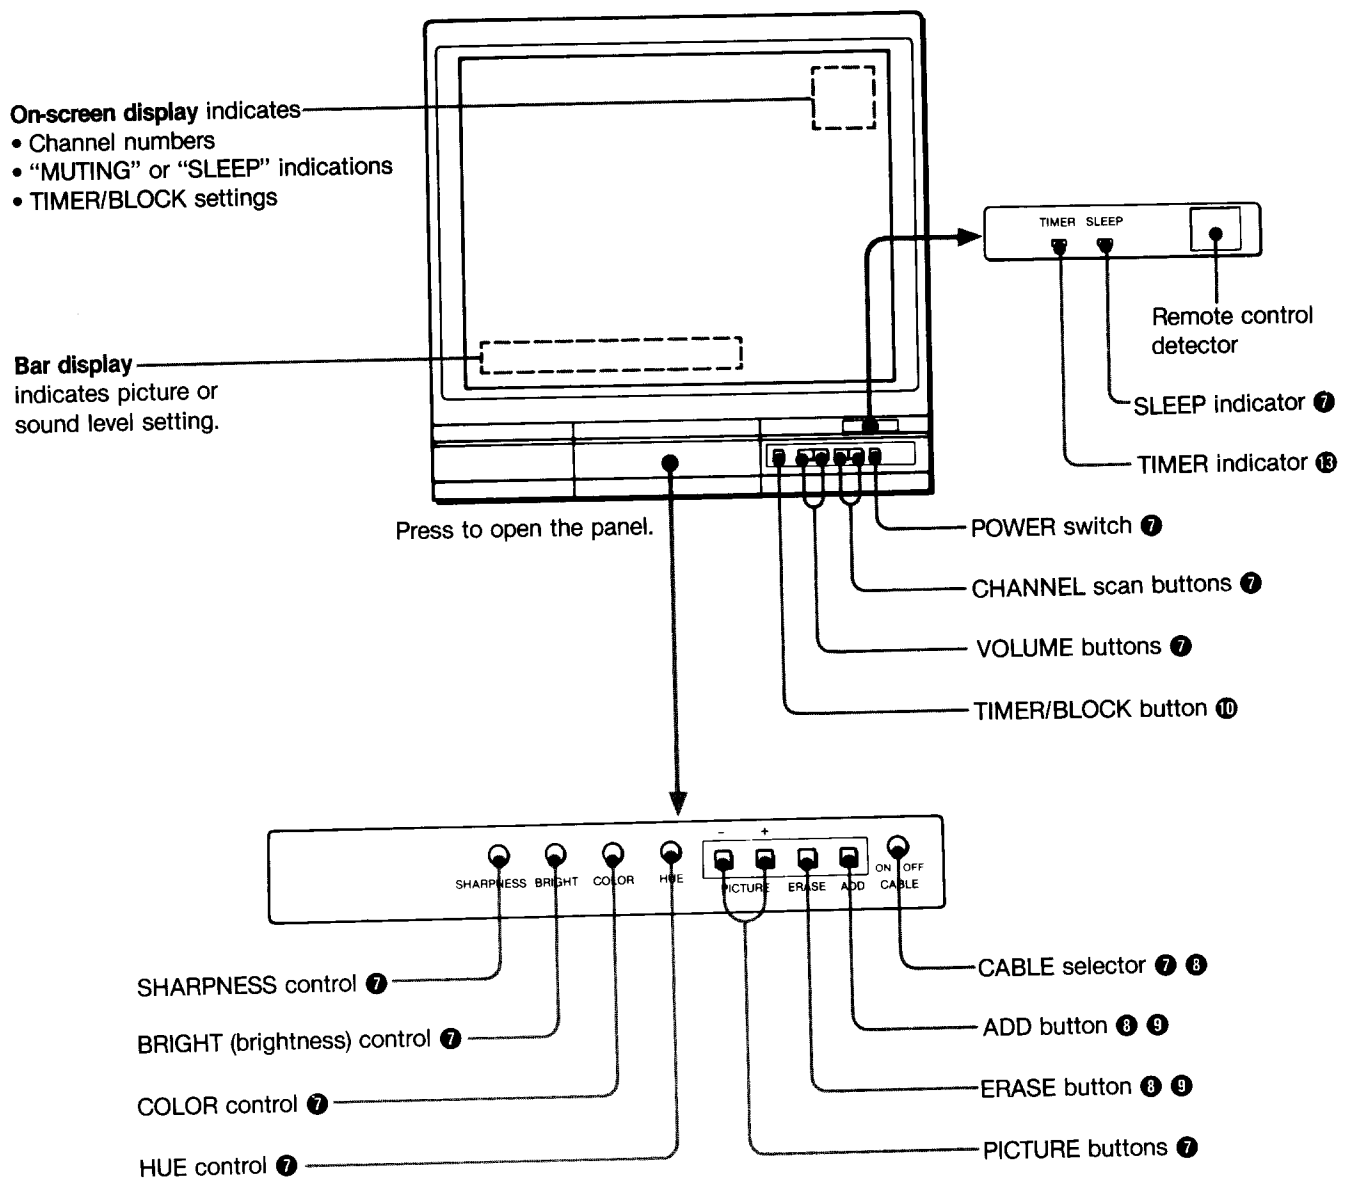

## Rear

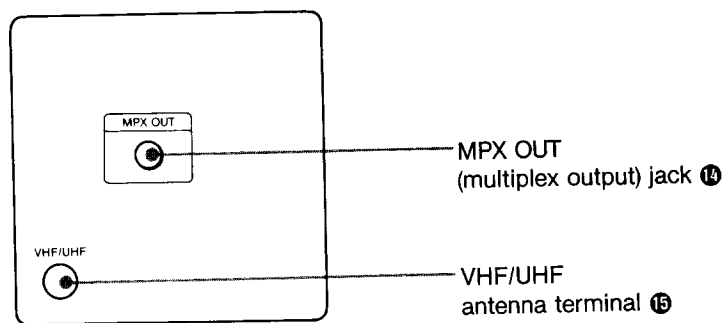 


## Remote Commander

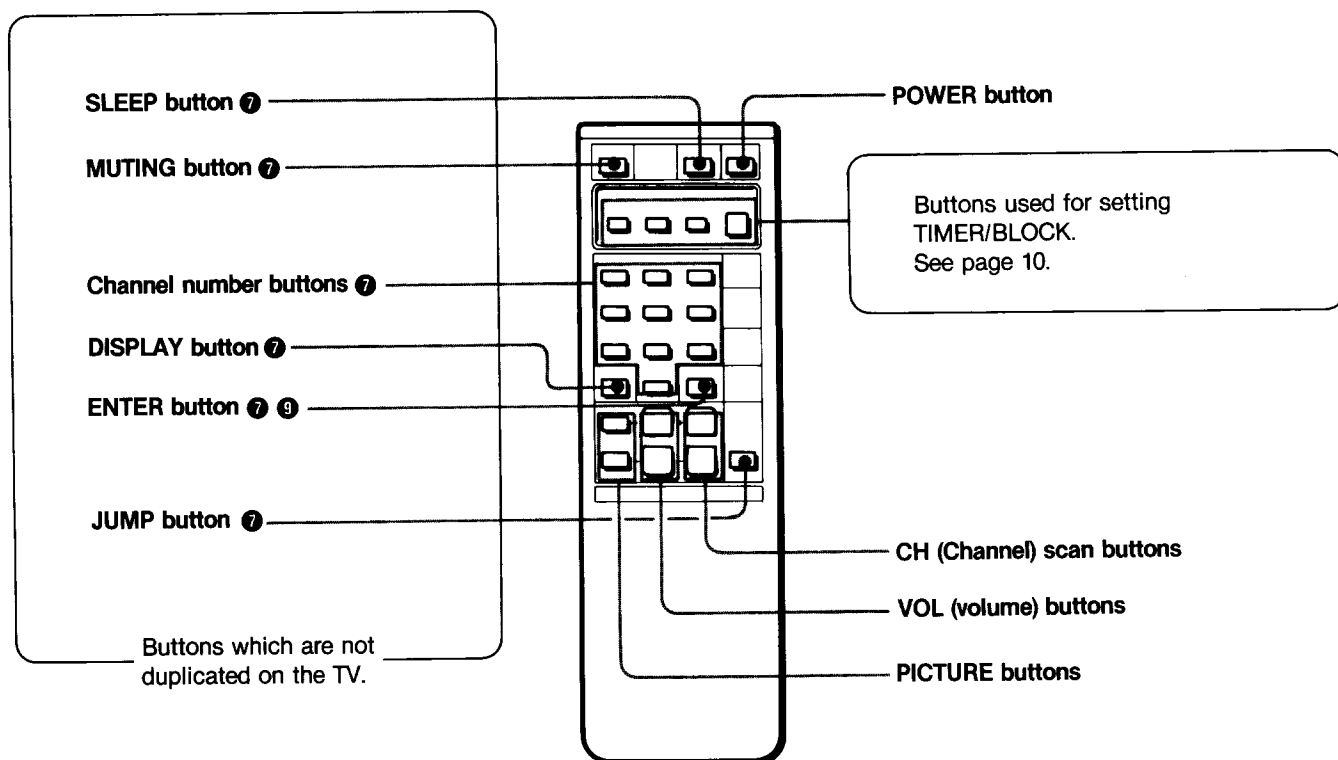 

## Battery installation

 Install two size AA (IEC designation R6) batteries into the battery compartment with the correct polarity.

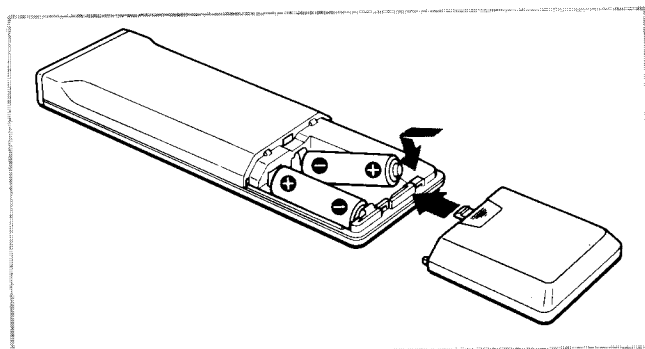

## Notes

- Use 2 size AA batteries (IEC designation R6).
- In normal operation, batteries will last up to half a year. If the set does not operate properly, the batteries might be exhausted. Replace all with new ones.
- To avoid damage from possible battery leakage, remove the batteries for extended unused periods.
- Be sure that there are no obstructions between the Commander and the TV.
- Operable range is limited.

 
If a Remote Commander that is not recommended is used to operate this TV, or if the supplied Remote Commander is used to operate another TV, the TV may not operate properly.

OPERATION

VIEWING TV PROGRAMS

This TV is capable of receiving normal VHF and UHF broadcasts plus cable TV channels. (See "Cable TV channel chart" below.)

Usually the Remote Commander is all that is needed to operate the TV in everyday use.

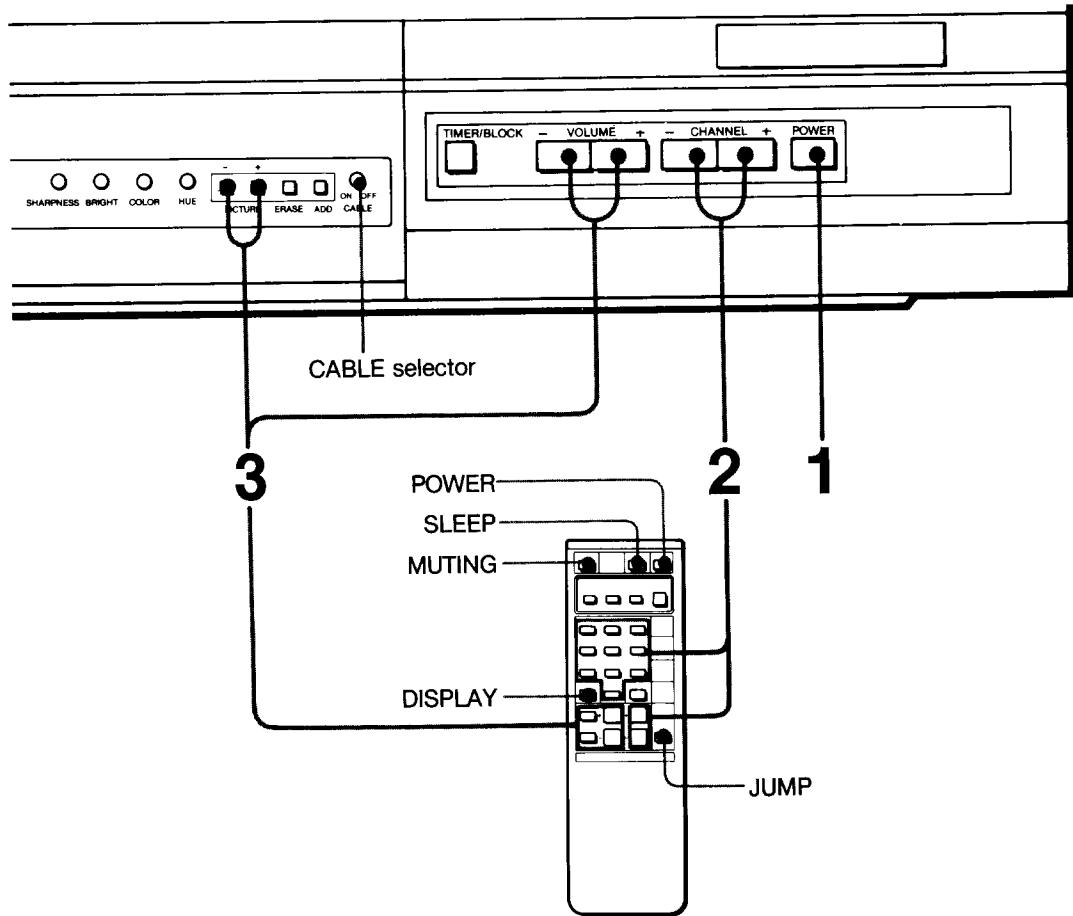

**Cable TV channel chart\***  
Cable TV systems use letters or numbers to designate channels.  
To tune in a channel, refer to this chart.

Number on this TV				1	5	6	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
Corresponding CATV channel				A-8	A-7	A-6	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
31	32	33	34	35	36	37	38	39	.....	93	94	95	96	97	98	99	100	101	102	.....	123	124	125
R	S	T	U	V	W	W+1	W+2	W+3	.....	W+57	W+58	A-5	A-4	A-3	A-2	A-1	W+59	W+60	W+61	.....	W+82	W+83	W+84

Check with your local cable TV company for more complete information on the available channels.

\* The designation of the cable TV channels conforms to the EIA/NCTA recommended standards.

**1 Press POWER to turn on the TV.**

The channel number will be displayed on the screen for several seconds.  
Set the CABLE ON/OFF selector to ON for cable TV channels and OFF for VHF and UHF channels.

**2 Select channels in one of the following two ways.**

- Press the numeral(s) of the channel and then press ENTER.

Ex. To select channel 6, press 6 and then ENTER.  
To select channel 125, press 1, 2, 5 and then ENTER.

If you have pressed the wrong numeral, wait for a few seconds until the channel number display has disappeared. Then press again.

- Press CH + for higher-numbered channels and – for lower-numbered channels. The channels will appear in numerical sequence.

The channel number display will disappear after several seconds.

To keep the display on the screen, press DISPLAY.

**3 Adjust the volume and picture to your preference.**

Press VOL + to increase volume, – to decrease it.  
Press PICTURE + to increase picture contrast, – to decrease it.

To switch quickly between 2 channels, press JUMP.





Each time JUMP is pressed, the channel which appeared on the screen directly before is recalled. This button enables you to keep track of two programs alternately.

To mute the sound, press MUTING. The “MUTING” indication will appear on the screen. To restore the sound, press MUTING again or VOL +/-.

**PICTURE ADJUSTMENTS**

Satisfactory results will usually be obtained with the controls set at the factory-preset levels. If any adjustments are necessary, adjust the required controls as follows. The controls are located behind the front panel.

 
**Adjusting the picture**

skin tones become purplish		skin tones become greenish
for less color intensity		for more color intensity
for less brightness		for more brightness
for less sharpness		for more sharpness

To turn off the set, press POWER again.

To have the TV turn off automatically after 1 hour, press SLEEP. The “SLEEP” indication will appear on the screen for a few seconds and the SLEEP indicator on the TV will remain lit until the TV is turned off. To cancel the SLEEP timer, press SLEEP again so that the SLEEP indicator goes out, or turn off the TV.

# PRESETTING CHANNELS

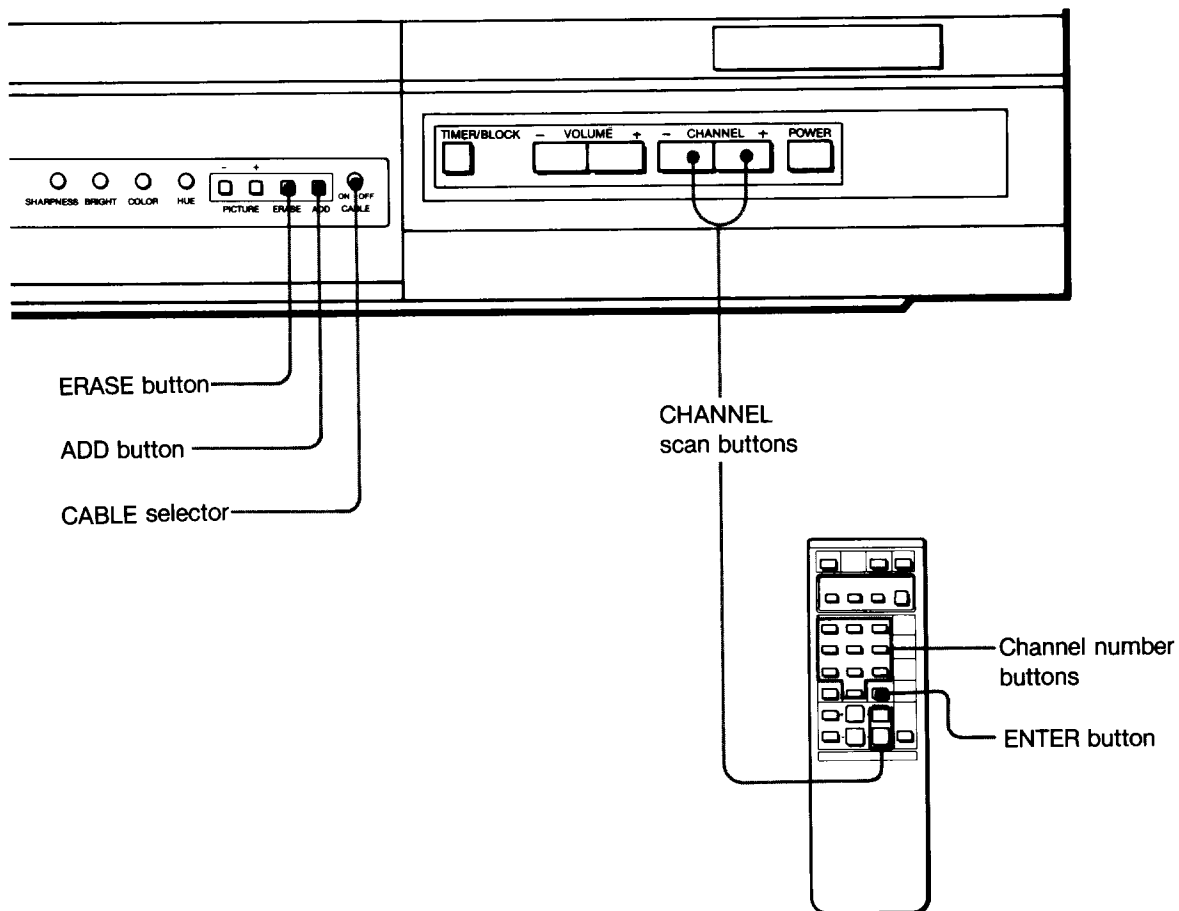

Receivable channels of your set are:  
VHF: 2-13  
UHF: 14-69  
Cable TV: 1-125

By adding and erasing channels, you can preset your TV so that only the desired channels appear, in numerical sequence, when CH (CHANNEL) +/- are pressed.

## Preparation

- 1 Turn on the TV.
- 2 Set the CABLE ON/OFF selector according to the channel to be added or erased.  
For cable TV channels, set to ON.  
For VHF and UHF channels, set to OFF.



## ADDING CHANNELS

**1 Select the channel to be added by pressing the channel number buttons and ENTER button.**

**2 Press ADD.**

A “+” indication will appear on the screen on the left of the channel number, indicating that the channel has been added.

Repeat steps 1 and 2 for other channels to be added.

## ERASING CHANNELS

**1 Select the channel to be erased.**

**2 Press ERASE.**

A “-” indication will appear on the screen on the left of the channel number, indicating that the channel has been erased.

Repeat steps 1 and 2 for other channels to be erased.

**To add erased channels again, follow the steps for adding channels.**

### **Note**

If you erase a VHF or UHF channel, the cable TV channel with the same number will also be erased, and vice versa.

# TIMER/BLOCK

## Internal clock

Once the internal clock is set, the current time will appear on the screen. It is necessary to set the clock correctly to activate the program start TIMER and channel BLOCK.

 
## Program start TIMER

Makes a program of your choice appear on the screen automatically.

## Channel BLOCK

Blocks a channel from appearing on the screen for 12 hours. Use channel BLOCK to prevent children from watching undesirable programs.

**The buttons used** for setting the internal clock, program start TIMER and channel BLOCK are located on the Remote Commander.

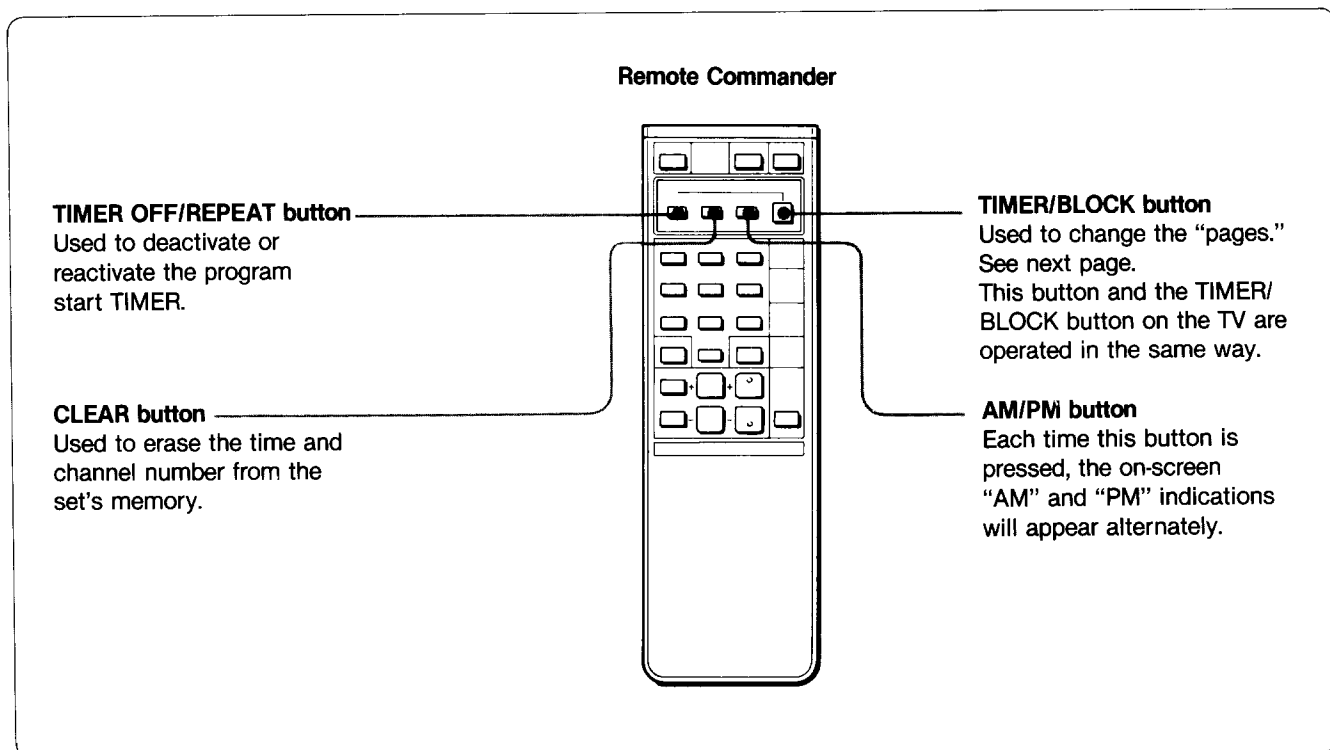


## Notes

- All settings will be erased from the set's memory if the set is unplugged, or if a power failure occurs.
- The TIMER and BLOCK will operate only if the clock is set correctly.
- If the TIMER and BLOCK are set for overlapping times on the same channel, the blocked channel will appear on the screen at the time set on the TIMER.

To set the internal clock, program start TIMER and channel BLOCK, you must summon the corresponding “pages”: “clock page”, “TIMER page” and “BLOCK page”.

To change the “pages”, press the TIMER/BLOCK button as illustrated below.  
The illustration shows how to change the “pages” after the clock has been set.

 
**T/B** stands for “Press the TIMER/BLOCK button.”

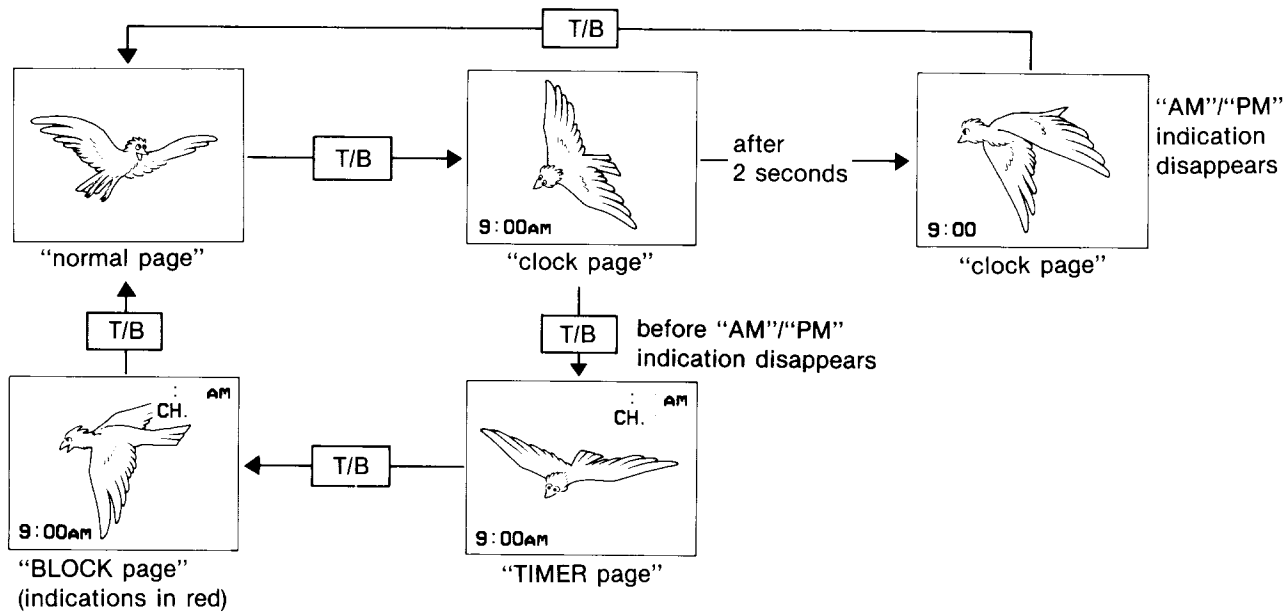

## HOW TO SET THE INTERNAL CLOCK


Ex. To set the clock to 8:05 PM, follow the steps below.

 - 1 Press **TIMER/BLOCK** once to change from "normal page" to "clock page".

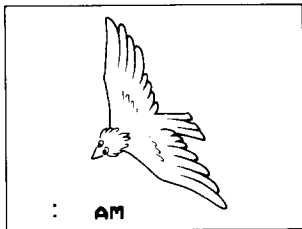

"clock page"

 - 2 Press 0, 8, 0, 5, AM/PM (0 necessary).

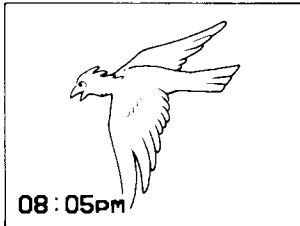

- 3 If you have made a mistake, press **CLEAR** and return to step 2.  
If you have performed the operation correctly, press **ENTER**.  
The numbers will "wink" to indicate that the clock has been set.  
(The 0 in front will disappear.)



The "AM"/"PM" indication will disappear after 2 seconds.

To summon "TIMER page", press **TIMER/BLOCK** before the "AM"/"PM" indication disappears.  
To return to "normal page", press **TIMER/BLOCK** after the "AM"/"PM" indication has disappeared.

To reset the clock, summon "clock page" and press **CLEAR** before the "AM"/"PM" indication disappears. Then follow the steps above from step 2.

### Note

 
12:00 AM stands for midnight.  
12:00 PM stands for noon.

## HOW TO SET THE PROGRAM START TIMER

Make sure that the clock has been set correctly before setting the program start **TIMER**.


Ex. To set the **TIMER** for a program which begins at 10:30 PM on channel 12, follow the steps below.

- 1 Press **TIMER/BLOCK** once to change from "normal page" to "clock page".

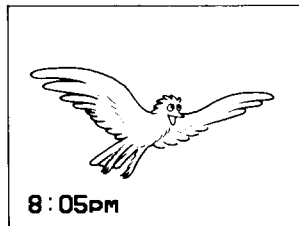


"clock page"

 - 2 Press **TIMER/BLOCK** before the "AM"/"PM" indication disappears and summon "TIMER page".

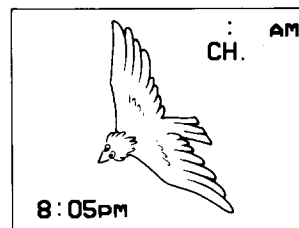


"TIMER page"

 - 3 Press 1, 0, 3, 0, AM/PM, **ENTER**.  
Numbers will "wink" to indicate that the time has been set.

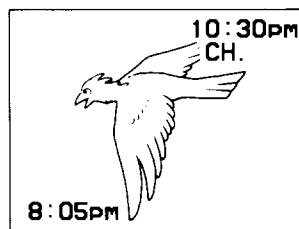

 - 4 Press 1, 2, **ENTER** (0 not necessary).  
Numbers will "wink" to indicate that the channel has been set.

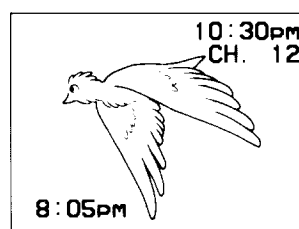

The **TIMER** indicator will light up to indicate that the **TIMER** has been set.

If you have made a mistake, press **CLEAR** and return to step 3.

At the preset time, the selected channel will appear on the screen and the TIMER indicator will go out. The TIMER will operate whether you are watching a TV program or a VCR playback, or even if you have turned off the TV. If no button\* is pressed within 2 hours after the preset time, an "OFF" indication will appear on the screen for 1 minute. If a button\* is still not touched during the 1 minute, the TV will turn off automatically as a safety precaution.

\*HUE, COLOR, BRIGHT and SHARPNESS controls excepted.

The TIMER operates only once, but the time and the channel will remain in the set's memory. If, at a future date, you want to see the same channel at the same time, press TIMER OFF/REPEAT. The TIMER indicator will light up to indicate that the TIMER has been reactivated.

If you want to deactivate the TIMER, press TIMER OFF/REPEAT again so that the TIMER indicator goes out. It is not necessary to summon "TIMER page" to use the TIMER OFF/REPEAT button. Furthermore, this button is effective even if the TV has been turned off.

To clear the TIMER setting, summon "TIMER page" and press CLEAR.


To reset, clear the setting and follow the steps on the previous page from step 3.

## HOW TO SET THE CHANNEL BLOCK

 Make sure that the clock has been set correctly before setting the channel BLOCK.


Ex. To set the BLOCK for a program which begins at 9:30 AM on channel 8, follow the steps below.

- 1 Press TIMER/BLOCK three times to change from "normal page" to "BLOCK page".

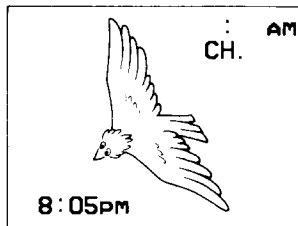

"BLOCK page"  
(indications in red)

 - 2 Press 0, 9, 3, 0, ENTER (0 necessary). Numbers will "wink" to indicate that the time has been set. Press 8, ENTER (0 not necessary). Number will "wink" to indicate that the channel has been set.

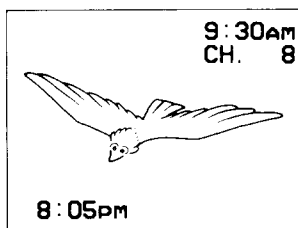

The BLOCK has now been set.

If you have made a mistake, press CLEAR and return to step 2.

At the preset time, the picture of the selected channel will be blocked from view and the sound will be muted. A red "BLOCKED" indication will appear on the screen while the channel is blocked. Normal reception will be resumed after 12 hours. To return to normal reception while the channel is blocked, recall "BLOCK page" and press CLEAR.

The BLOCK setting blocks a specified channel for the same 12-hour period everyday.

To clear the BLOCK setting, summon "BLOCK page" and press CLEAR.

To reset, clear the setting and follow the steps above from step 2.

# APPLICATIONS WITH OTHER OPTIONAL EQUIPMENT

## ENJOYING VCR PLAYBACK

 
Connect a VCR to the VHF/UHF antenna terminal and connect the external antenna to the VCR. For details on the connections, see the instruction manual of the VCR.

Keep the VCR away from the TV if the display or sound is affected.

## ENJOYING MULTICHANNEL TV SOUND (MTS) BROADCAST

### Caution

Before connecting, make sure that the power to each piece of equipment is turned off.

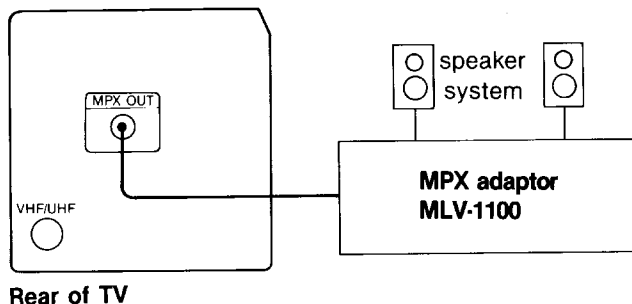

Rear of TV

Connect to the MPX OUT jack an optional special adaptor for any multichannel TV sound (stereo or bilingual) broadcasts.

# ANTENNA/CABLE CONNECTION

 
If you cannot obtain satisfactory reception with an indoor antenna, using an outdoor antenna may be necessary. Cable TV reception is only possible by connecting a cable supplied by your local cable operator. Prepare the antenna or cable end using the appropriate connector, and connect the antenna or cable to the antenna terminal of the TV. (See [A] or [B] below.)

A

Combination VHF/UHF antenna \*, VHF antenna, UHF antenna or CATV cable


Select the proper connector according to the cable type.

When the cable is a 75-ohm coaxial type (round)




Use an optional F-type connector.

 When the cable is a 300-ohm ribbon type lead-in (flat)



Attach the antenna connector.

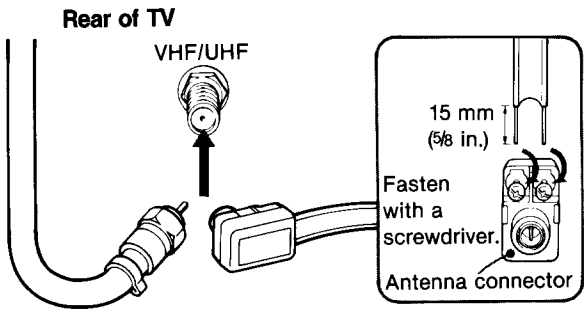 


\* Most combination antennas are equipped with a signal splitter. Take off the splitter and attach the proper connector.

B

When both VHF and UHF antennas are connected

 Prepare the VHF antenna end using the appropriate connector as illustrated in [A]. Attach an optional EAC-66 U/V mixer to the TV antenna terminal, and connect the cables to the U/V mixer.

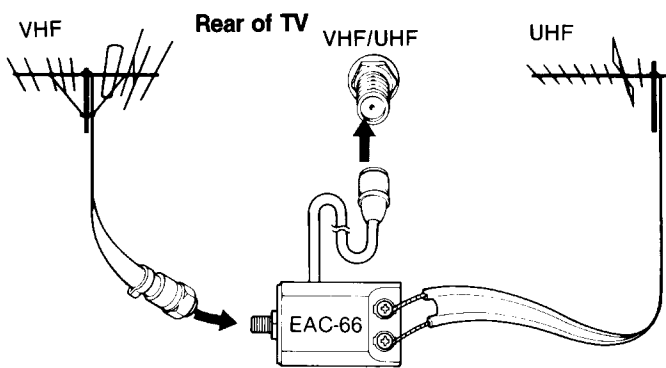

When the cable is connected to the TV with the U/V mixer, snow and noise may appear in the pictures of the cable TV channels over 37 (W+1).

Note to CATV system installer in the U.S.A.:

This reminder is provided to call the CATV system installer's attention to Article 820-22 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.



SPECIFICATIONS

Television system	American TV standards
Channel coverage	VHF: 2–13 UHF: 14–69 Cable TV: 1–125
Picture tube	Microblack Trinitron tube 27-inch picture measured diagonally 28-inch picture tube measured diagonally
Output	MPX OUT phono jack, 77.5 mVrms (100% modulation, main channel 1 kHz) 10 k ohms load impedance
Power requirements	120 V AC, 60 Hz
Power consumption	155 W (max.) 6 W (in standby condition)
Accessories supplied	Remote Commander RM-746 with 2 size AA batteries Antenna connector (300 ohm to 75 ohm matching transformer)
Optional accessories	U/V mixer EAC-66 MPX adaptor MLV-1100

Design and specifications are subject to change without notice.

TROUBLESHOOTING

 Disturbances in picture and sound can often be eliminated by checking the symptoms and following the suggestions listed below.

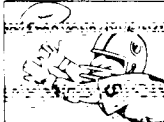SYMPTOM		CHECK AND ADJUST
GENERAL	<b>Poor or no picture (screen not lit), good sound</b>	<ul style="list-style-type: none"><li>Adjust PICTURE.</li><li>Adjust BRIGHT.</li><li>Check antenna/cable connections.</li></ul>
	<b>Good picture, no sound</b>	<ul style="list-style-type: none"><li>Press VOLUME +.</li><li>Release MUTEING on the Remote Commander.</li></ul>
	<b>No picture (screen not lit), no sound</b>	Is POWER switched on? Power in outlet?
	<b>No color</b>	Is it a color program?
	<b>Snow and noise only</b>	<ul style="list-style-type: none"><li>Is it an active or the correct channel?</li><li>Check the CABLE selector setting.</li><li>Check antenna connections.</li></ul>
	 <b>Dotted lines or stripes</b>	This is often caused by local interference. (Ex. cars, neon signs, hairdryers etc.) Adjust antenna for minimum interference.
	 <b>Double images or ghosts</b>	Reflections from nearby mountains or buildings often cause this problem. A highly directional outdoor antenna or CATV cable may improve the picture.
TIMER/BLOCK	Try another channel. It could be station trouble.	
	<b>Program start TIMER and/or channel BLOCK does not operate properly.</b>	<ul style="list-style-type: none"><li>Is the clock set correctly?</li><li>Is the setting correct?</li><li>Have you unplugged the set? Has a power failure occurred? If so, the settings have been erased.</li></ul>

If the problem still cannot be solved, contact your nearest service facility.